

# DISH-TV

## QUICK-START GUIDE

Start enjoying your NEW TV, using this simple guide.

42" (106cm) FULL HD LED LCD TV

Model Number: UHF42MH

### PARTS LIST

In the box you will find:

- 1 x 42" (106cm) FHD LED Television
- 1 x Remote Control
- 2 x Base Stand
- 2 x AAA Batteries
- 1 x Instruction Manual
- 4 x 26mm Screws for Base Stands
- 4 x M6 Screws for Wall Mounting

### WHAT YOU WILL NEED

Screwdriver, to attach Base Stand (Not Included)

Antenna Cable (Not Included)



# 1

### CONNECTIONS

1. Power Cable
2. HDMI 1 Input (ARC)
3. RF (UHF Antenna) Input
4. Coaxial Digital Audio Output (RCA Socket)
5. L/R Audio Output
6. HDMI 2 Input
7. VGA Input
8. PC Audio Input
9. HDMI 3 Input
10. Headphone Connection
11. AV Video Input
12. L/R Audio Input
13. USB Port

# 2




#### Bottom Inputs



#### Side Inputs

### CONNECT TO POWER

1. Install the Base Stand (See Page 11 in the Instruction Manual).
2. Connect the Antenna Cable to the RF Socket in the TV (To be connected to UHF Aerial for Channel Tuning).
3. Connect the TV Power Cable to the Mains Power Socket.
4. Insert Batteries into the Remote Control.
5. Press the POWER/ STANDBY Button on the Remote Control to turn the power on. The standby light will turn off and the TV screen will display the Initial Setup.

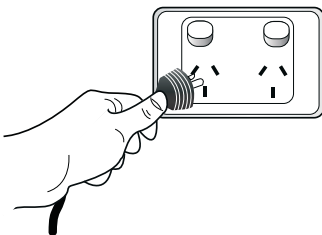

# 3

### EASY SETUP SCREEN

The on-screen display gives you easy instructions for setting up the TV. Please refer to the Instruction Manual for detailed information.

Use the Navigation Buttons to select the Language, then press the OK Button to confirm your selection. Use the Navigation Buttons to select your Country - New Zealand, then press the OK Button to confirm. The TV will automatically enter Channel Tuning and start tuning available channels in your area.

# 4

